Vortex Mixer

User's Guide

#





Trademarks

All product and company names are trademarks $^{\text{m}}$ or registered $^{\text{o}}$ trademarks of their respective holders. Use of the trademark(s) in this document does not imply any affiliation with or endorsements by the trademark holder(s).

TABLE OF CONTENTS

ntroduction 4
Specifications 4
nstallation 5
Operation 5
Head Removal and Replacement 5
Ordering Information 6
Accessories 6
Warranty 7

Introduction

The Vortex Mixer is a quiet, powerful, mixer designed for vortexing micro tubes of all sizes (0.4 mL to 50 mL, and larger). It combines dynamic balance technology with an electronic speed control to provide smooth speed and quiet operation with low excess vibration. This vortex mixer will provide years of reliable service.

Specifications

VORTEX MIXER	
Speed/Control	User settable 200 to 3200 rpm
Operating Modes	ON (continuous), OFF, and TOUCH mix
Head	Standard rubber cup (Vortexer Flat head PN 36117310)
Feet	Four suction cups
Orbit	3 mm
Operating Environment	4°C to 45°C
Dimensions (WxDxH)	13 x 16 x 17 cm / 5.1 x 6.2 x 6.6 in.
Weight	3.8 kg / 8.4 lbs.
Electrical	115VAC, 60 Hz, 1.5 amps (115V model) 230VAC, 50 Hz, 0.75 amps, (230V model)
Warranty	2 years

Installation

- 1. Place the Vortex Mixer on a clean, flat, stable surface and press down slightly to allow the suction cup feet to adhere.
- 2. Make sure that the mode switch is in the OFF position and plug the vortex mixer into a properly grounded outlet.
- 3. Using the speed control knob, adjust the mixing speed to the desired setting.
- 4. Check that the cup head is securely fastened by gently rotating it clockwise.
- 5. Start at the middle of the speed range if you are uncertain of what setting you need.

Operation

In touch mode, the tube to be mixed is pressed downward against the head to activate the vortex mixing action.



Avoid the use of solvents as they may attack the rubber cup head or the acrylonitrile butadience styreme (ABS) plastic housing.

Head Removal and Replacement

To change or replace the rubber head attachment, grasp the unit body with your left hand, and then gently rotate the head attachment counter clockwise with your right hand until the cup head is completely unscrewed.

Replace the head attachment by gently rotating clockwise until it is tight and you feel the rubber start to grip the top of the dynamic drive assembly.



Attaching accessory heads requires the use of a Phillips screwdriver to tighten the center screw in the accessory head.

Ordering Information

PART NUMBER	DESCRIPTION
36110740	Vortex Mixer with standard cup head, 115V, US cord
36110750	Vortex Mixer with standard cup head, 230V, EU cord (3-pin cord)
36110760	Vortex Mixer with standard cup head, 230V, UK cord
36110770	Vortex Mixer with standard cup head, 230V, AU cord

Accessories

Accessory heads are available. Please contact a Gilson Service Center if you need one of these accessory heads.

PART NUMBER	DESCRIPTION
36117310	Vortexer Flat head
36117330	Optional Foam Rack for 12 tubes (15 mL) For Vortex Mixer with standard cup head only (PN 36110740)
36117340	Optional Foam Rack for 5 tubes (50 mL) For Vortex Mixer with standard cup head only (PN 36110740)
36117350	Horizontal head, for 12 x 1.5 mL
36117360	Horizontal head, for 4 x 15 mL
36117370	Horizontal head, for 2 x 50 mL

Warranty

Gilson warrants this instrument against defects in material under normal use and service for two years from the date of purchase. This warranty is valid only if the instrument is used in the manner described in this guide and for the purpose for which it is designed. Gilson is not responsible for consequential damages resulting from the misuse or bad cleaning or decontamination of this instrument. Enclose with the returned instrument a description of the problem that has occurred.

Specifications subject to change without notification — errors excepted. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under copyright laws.

www.gilson.com/contactus

#GILSON®